# Wireless Touch Switch (Waterproof Type)




### RN-MTR II 200(Receiver), TS200(Transmitter)

This product is a waterproof type wireless touch switch for automatic doors. Please read this manual carefully for safe and correct use of the product.


# 1. Component & Specifications

Components	TS200 (Transmitter)			RN-MTR II 200 (Receiver)		
	Double-sided adhesive tape		1EA	6P Harness		1EA
	Batteries 1.5V Size AAA		2EA	Fixing screws (Ø4×13)		2EA
	User's Manual		1 Сору	User's Manual	ser's Manual	
Specifications	Power supply	1.5V*2 (Size AAA Battery)		Power supply	DC 12~30V / AC 12~24V	
	Duration	Approx, 12 months (100 Cycles / day)		Relay contact capacity	AC/DC 400V, 120mA	
	Rated frequency	FM 447.9375 MHz		Rated frequency	FM 447.9375 MHz	
	Distance	10m Within (When installed in steel structures : 2m Within)		Reception sensitivity	-110 dBm	
	Power consumption	30mA Under		Power consumption	100mA Under	
	Operating temp	-20°C ~ 50°C		Operating temp	-20°C ~ 50°C	
	Size	39 x 185 x 13mm		Size	99 x 43 x 21 mm	


# 2. How to Install Wireless Touch Transmitter Switch (TS200)

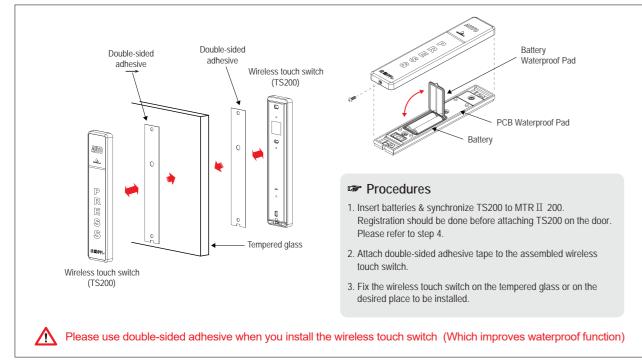

# 3. Wireless touch switch Receiver Wiring

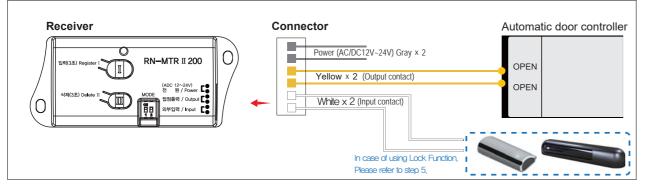

# 4. Wireless touch switch Receiver

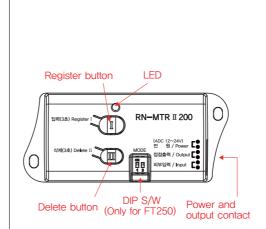

Ten transmitters can be registered per receiver.

\* Setting method – Turn off receiver ( MTR II 200 ), while pressing & holding Register button ( I ) and turn on the MTR II 200 ( maintain the contact output function will be able )

- Input (register) a transmitter by pressing the transmitter's switch (TS200) for three

- Delete all registered transmitters by pressing the Register | and Delete || button at

- The contact output is done by pressing the registered transmitter (two yellow lines).

seconds while pressing and holding the Register I button – When the Registration process is complete, the red LED turns on.

 Delete a transmitter by pressing the transmitter's switch (TS200) for three seconds while pressing and holding the Delete II button.
When the deletion process is complete, the LED flickers once,

- When the deletion process is complete, the LED flickers three times.

- When the contact output is done, the red LED turns on,

(5) Function to maintain the contact output (only for TS200)

- When the function to maintain the contact output is enabled, the blue LED turns on.
- When the function to maintain the contact output is disabled, the green LED turns on.

#### \* Operating method

① Registration of transmitters

② Deletion of transmitters

③ Deletion of all transmitters

(4) Contact output

the same time for 5 seconds

 The contact output is maintained by pressing the registered transmitter for more than 5 seconds and is released by pressing the registered transmitter again.
When the contact output is in operation, the violet LED turns on.

## 5. Works with remote control (FT250)

You can use "Maintain the contact output" and "Lock" Function, please refer to below.

